

# **TL-BOX** Personal VoIP TalkBox – talk for FREE with Skype®




## **INTRODUCTION**

Dynamode is pleased to introduce an exciting new product for the world of free telephone calls using the ever popular **Skype**® software client.

The TL-BOX is a fully featured, easy to install Home and Business solution which allows the consumer to make and receive free *VoIP* (Voice over IP) telephone calls nationally and internationally at no cost.

But it gets better than that! The *TalkBox* plugs into an existing telephone wall socket and allows any regular telephone (such as BT phones, DECT wireless etc) to make and receive free **Skype**® calls to anyone on the planet – far better than messing around with headphones and microphones attached to a PC.

And that's not all. It brings a whole new world of flexibility to Skype® you could only dream of. How about automatically forwarding your inbound **Skype**® calls to your mobile when you're out and about! How about Call waiting and parallel phone ringing in more than one location?

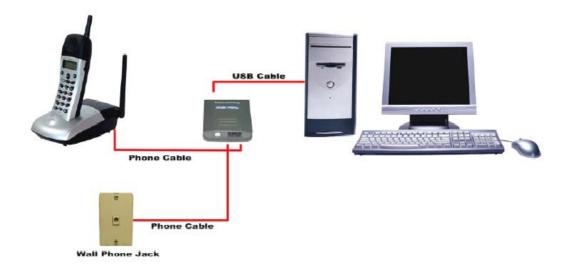

### TalkBox setup diagram

# **FEATURES**

- Use your existing telephone Handset to make & receive FREE *Skype*® calls
- Latest VoIP technology for echo free, quality call connections at NO cost
- Forward Skype® calls to your mobile phone\*
- No subscription needed for regular **Skype**® or Dynamode *TalkBox*
- Make calls to regular phones and mobiles anywhere in the world using Skype® Out service
- Receive calls from regular phones and mobiles from anywhere in the world suing Skype® In service
- Compatible with any standard line Phone and Wireless (DECT etc)
- Full duplex, echo free sound experience
- Auto detection of inbound Skype® and regular phone calls
- Call waiting on PSTN and Skype® phone calls
- Ring up to 5 phones in parallel
- IVR-Interactive Voice Response for remote usage
- Compact, stylish design fully Plug n Play
- Self powered via USB Port size of a packet of cigarettes!

### **Requirements**

- Regular telephone (cordless, DECT, cabled phone etc)
- Broadband Service
- PC with the following minimum specifications:

Pentium 400Mhz or above Windows® 2000® or XP® Available USB Port, USB2.0 or USB1.1\* Skype® version 1.2 or higher (visit www.skype.com)\*\* 128Mb RAM, 256Mb RAM recommended 10Mb Hard Disk space USB Cable (supplied as standard) RJ11 Cable (supplied as standard) Regular Telephone\*\*\* CD-ROM drive for software Driver installation

\*USB Port must be directly on the PC or via an Active Hub only \*\* Some features may require additional cost – check with your Telco \*\* Skype® for Windows® is supplied on CD-ROM

## **Specifications**

#### Processor

- VoIP optimised ASIC Processor with on-board packet buffering
- Built-in NVRAM for configuration settings

#### Interfaces

- USB 1.1 compliant Plug n Play
- RJ11 socket for telephone wall socket connection
- RJ11 socket for regular telephone connection

#### **Status LEDs**

- **Power** *TalkBox* is running
- **PSTN** incoming/outgoing call is on regular PSTN network
- VoIP incoming/outgoing call is on Skype® VoIP network

#### **Power requirements**

• Powered directly from USB Port – no additional power supply needed

#### Conformance

• CE Approval, FCC compliance

### What's in the box?

- Dynamode TL-BOX *TalkBox* VoIP Gateway
- USB Cable
- RJ11 Telephone Cable
- User Manual
- Skype® Windows® Client on CD-ROM, manuals & drivers



© Copyright by Dynamode, 2006. All rights reserved